

Installation Equipment

Prysmian Part Number: See Individual Descriptions

Regulator

Part No. XBFSC00004

Used for securing the blowing head to enable safe installation of the fibre into the blown fibre tube.



Coiler

Part No. XBFSC00008

The coiler winds the fibre into a fibre pan. It is used for coiling using the range extending method of installation. The unit consists of a coiling head, a control unit and a drive unit. It operates from a 100V ac or a 24V dc supply.



Pan Guide and Support Frame

Part No. XBFSC00007

The Pan Guide and Support Frame are used to guide the fibre from the pan to the blowing head. The Support Frame is also used for holding the pan in place when coiling.



Pan Inversion Ring

Part No. XBFSC00012

The Pan Inversion Ring is used to transport fibre from one pan to another. It enables a full pan of fibre and an empty pan to be joined together. Once the pans are joined together, they are rotated 180° so that the fibre safely falls into the empty pan.



Blowing Beads

Part No. XBFSC00001

These beads are fixed to the end of the blown fibre unit before blowing commences. The bead helps the guidance of the blown fibre unit through the blown fibre tube particularly where bends may be located.



Packs of 1000.

Prysmian Telecom Cables & Systems UK Ltd, Chickenhall Lane, Bishopstoke, Hants SO50 6YU, UK

Technical Enquiries +44 (0) 2380 608760 Fax Number +44 (0) 2380 608769

© PRYSMIAN 2005. All Rights Reserved.

The information contained within this document must not be copied, reprinted or reproduced in any form, either wholly or in part, without the written consent of Prysmian. The information is believed correct at the time of issue. Prysmian reserves the right to amend this specification without notice. This specification is not contractually valid unless specifically authorised by Prysmian.

Issue 01, October 2005
Ref: SR014